


CUSTOM WINDOW WELL QUOTATION FORM

PLEASE SUBMIT THE FOLLOWING INFORMATION WHEN REQUESTING A CUSTOM WINDOW WELL

HOW TO SIZE YOUR CUSTOM WINDOW WELL

Your window well should be correctly sized to ensure maximum utility.

1. Your window well should be at least 4-6" longer than the window opening.
2. Your window well should be high enough to extend 4-6" above the soil grade as well as extend at least 8" below the bottom of the window.
3. If either the length is less than 20" or the projection is less than 9", the window well will need to be made with square corners instead of the normal round corners.
4. The maximum height possible in a single piece is 42". For requirements greater than 42" in height, multiple pieces will be connected.
5. Reinforcement (such as overlapping sections or permanent bracing) maybe required for window wells that are longer than 8' or are subject to heavy backfill pressure.
6. For large orders any size is possible – For smaller orders please select from the following stock heights available: 12", 22", 30", 36", 42"

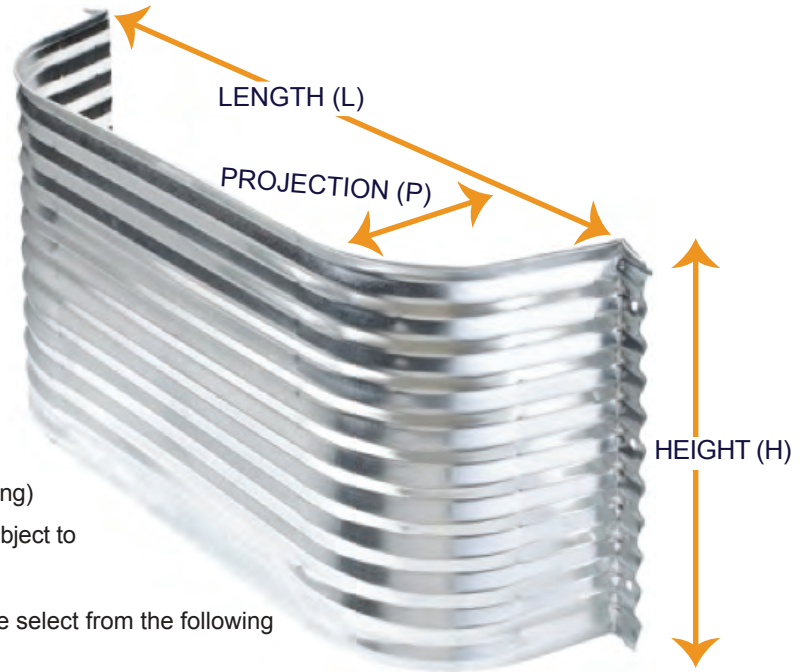

	LENGTH 'L' (INCHES)	PROJECTION 'P' (INCHES)	HEIGHT 'H' (INCHES)	CORNER STYLE ROUND OR SQUARE	MATCHING COVER QUOTATION REQUIRED	EXTRA INFORMATION
1				<input type="checkbox"/> R <input type="checkbox"/> S	<input type="checkbox"/> Y <input type="checkbox"/> N	
2				<input type="checkbox"/> R <input type="checkbox"/> S	<input type="checkbox"/> Y <input type="checkbox"/> N	
3				<input type="checkbox"/> R <input type="checkbox"/> S	<input type="checkbox"/> Y <input type="checkbox"/> N	
4				<input type="checkbox"/> R <input type="checkbox"/> S	<input type="checkbox"/> Y <input type="checkbox"/> N	
5				<input type="checkbox"/> R <input type="checkbox"/> S	<input type="checkbox"/> Y <input type="checkbox"/> N	

NOTES:

The window well sizing information is a guideline only. Please check your local building codes to ensure code compliance particularly for egress window wells.